


AIRCRAFT PARKING/
DOCKING CHART
TERMINAL 1 – ICAO

APRON ELEV
131 ft

ATIS Departure	132.80
GND EAST	121.95
GND WEST	121.75
TWR	134.60

TEL-AVIV /
BEN-GURION (LLBG)

ELEVATIONS ARE IN FEET
DIMENSIONS ARE IN METRES
BEARINGS ARE MAGNETIC

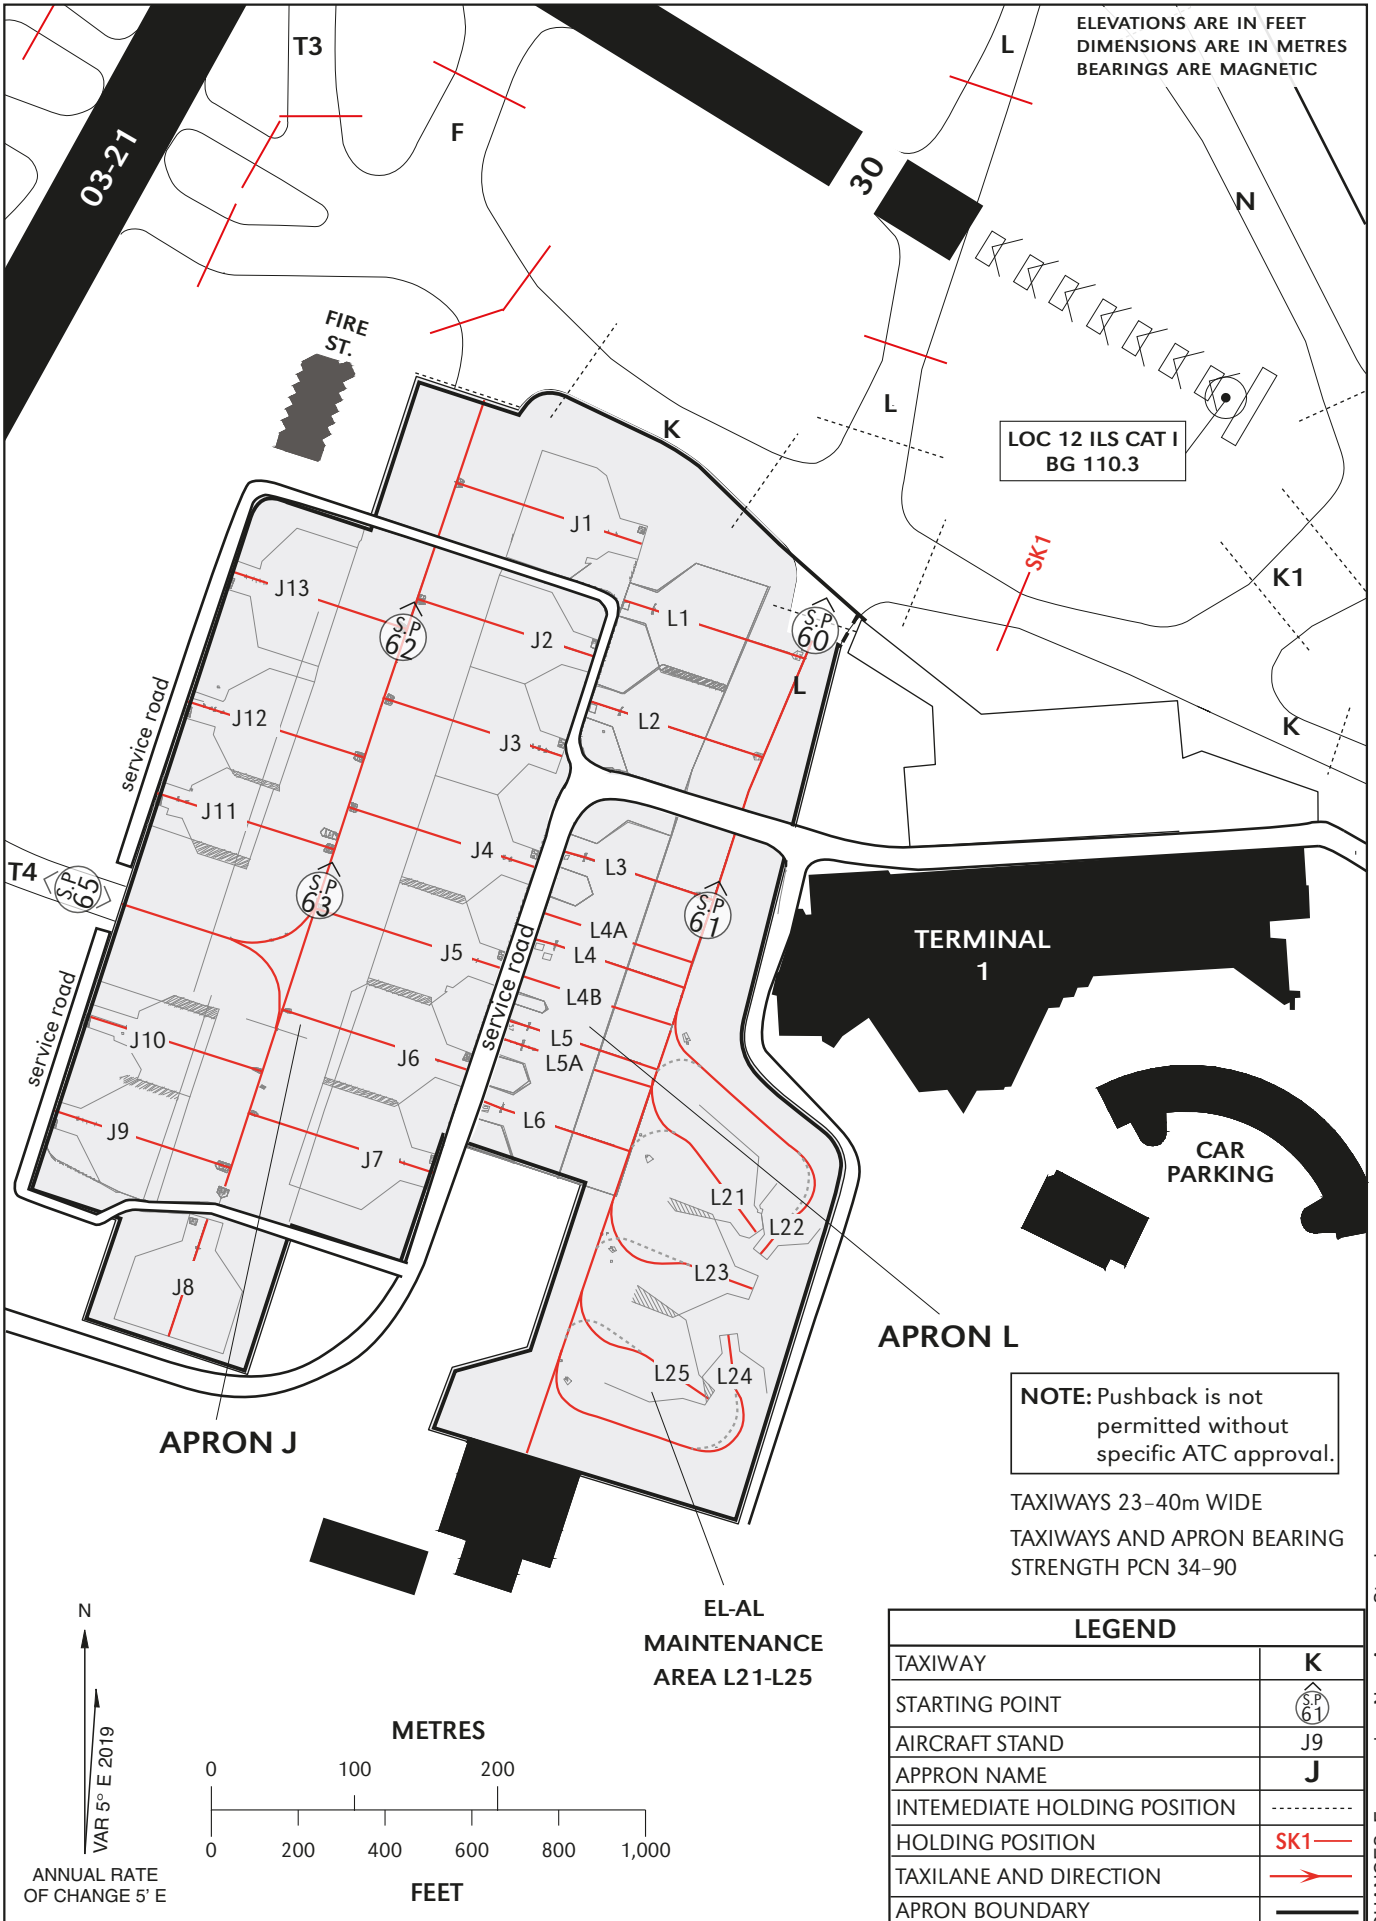

LOC 12 ILS CAT I
BG 110.3

TERMINAL
1

CAR
PARKING

APRON L

APRON J


EL-AL
MAINTENANCE
AREA L21-L25

NOTE: Pushback is not permitted without specific ATC approval.

TAXIWAYS 23-40m WIDE
TAXIWAYS AND APRON BEARING
STRENGTH PCN 34-90

LEGEND

TAXIWAY	K
STARTING POINT	
AIRCRAFT STAND	J9
APRON NAME	J
INTERMEDIATE HOLDING POSITION
HOLDING POSITION	SK1
TAXILANE AND DIRECTION	
APRON BOUNDARY	

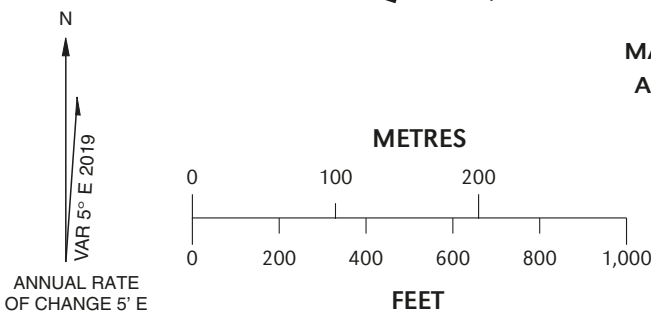

CHANGES: Frequencies, New Apron Stands.

INS Coordinates for Aircraft Stands (GND East)			
Stand No.	Coordinates	Stand No.	Coordinates
J1	31° 59' 51.63" N 034° 53' 32.27" E	L1	31° 59' 49.93" N 034° 53' 33.27" E
J2	31° 59' 49.11" N 034° 53' 30.71" E	L2	31° 59' 47.61" N 034° 53' 32.39" E
J3	31° 59' 46.69" N 034° 53' 30.39" E	L3	31° 59' 44.27" N 034° 53' 31.45" E
J4	31° 59' 44.22" N 034° 53' 29.46" E	L4	31° 59' 42.26" N 034° 53' 30.67" E
J5	31° 59' 41.91" N 034° 53' 28.57" E	L4A	31° 59' 42.85" N 034° 53' 30.89" E
J6	31° 59' 39.67" N 034° 53' 27.40" E	L4B	31° 59' 41.41" N 034° 53' 30.34" E
J7	31° 59' 37.33" N 034° 53' 26.51" E	L5	31° 59' 40.41" N 034° 53' 29.96" E
J8	31° 59' 35.35" N 034° 53' 21.12" E	L5A	31° 59' 39.98" N 034° 53' 29.80" E
J9	31° 59' 38.28" N 034° 53' 17.90" E	L6	31° 59' 38.56" N 034° 53' 29.25" E
J10	31° 59' 40.38" N 034° 53' 19.21" E	L21	31° 59' 36.36" N 034° 53' 36.06" E
J11	31° 59' 45.57" N 034° 53' 20.56" E	L22	31° 59' 35.77" N 034° 53' 36.68" E
J12	31° 59' 47.62" N 034° 53' 21.53" E	L23	31° 59' 34.89" N 034° 53' 35.72" E
J13	31° 59' 50.64" N 034° 53' 22.38" E	L24	31° 59' 33.33" N 034° 53' 35.63" E
		L25	31° 59' 32.35" N 034° 53' 34.63" E